











Standaard staat het frame startklaar ingesteld.

Instellen Van De (4) Geheugenposities; Verplaats de tafel naar de gewenste hoogte met de knoppen OMHOOG of OMLAAG. Druk vervolgens op de knop SAVE (s) en tegelijkertijd een van de positielknoppen 1-4. De besturingseenheid bevestigt het opslagproces na 1-2 seconde met een dubbel knipperend display met de ingestelde hoogte. Er kunnen op deze manier 4 verschillende posities worden opgeslagen.

Reset; Dit wordt gedaan door het tegelijk indrukken, en ingedrukt houden, van de beide pijl toetsen voor ongeveer 5-10 seconden. De poten bewegen dan iets, en er komt een L in het scherm. Na de L komt er een hoogte in cm te staan, doorgaans 65

Daarna kunnen de toetsen worden losgelaten en is het bureau gebruiksklaar.

The frame is ready to start.

Setting The (4) Memory Positions; Move the table to the desired height using the UP or DOWN buttons. Then press the SAVE (s) button and one of the position buttons 1-4 at the same time. The control unit confirms the saving process after 1-2 seconds with a double flashing display with the set height. In this way 4 different positions can be stored.

Reset; This is done by simultaneously pressing and holding both arrow keys for about 5-10 seconds. The legs then move slightly, and an L appears in the screen. After the L there is a height in cm, usually 65

The keys can be released and the desk is ready for use.